


Exhaust Gas Recirculation Valve Cooler Removal - 1.7L Diesel LPL, LPV and LUB

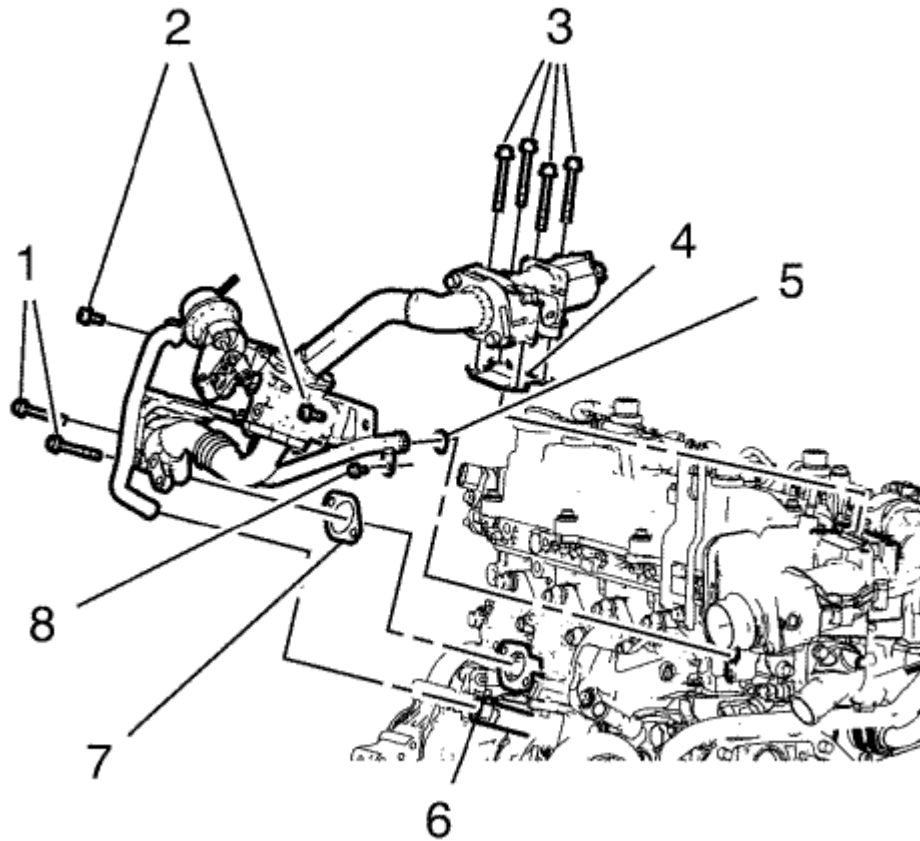

1. Remove the exhaust gas recirculation coolant pipe bolt (8).
2. Loosen the exhaust gas recirculation coolant hose clamp (6).
3. Remove the 4 exhaust gas recirculation valve bolts (3).
4. Remove the 2 exhaust gas recirculation bypass valve bolts (1).
5. Remove the 2 exhaust gas recirculation cooler bolts (2).
6. Remove the entire exhaust gas recirculation assembly.
7. Remove the exhaust gas recirculation valve gasket (4).
8. Remove the exhaust gas recirculation coolant pipe seal ring (5).
9. Remove the exhaust gas recirculation bypass valve gasket (7).